

## Happycast update SOP


If user did not process the happycast update process (interface is “NOT” simple Chinese version), please check following “Install New Happycast”

If your happycast has been Simple Chinese version, please check last 2 page for “Uninstall” process to remove Happycast first, then go for new Happycast install process as following step


### Install New Happycast

Step 1 Download “Happycast\_6.1.1.5.apk” into USB root directory, then plug USB in Q3PLUS USB port

Step 2 Enter APP function

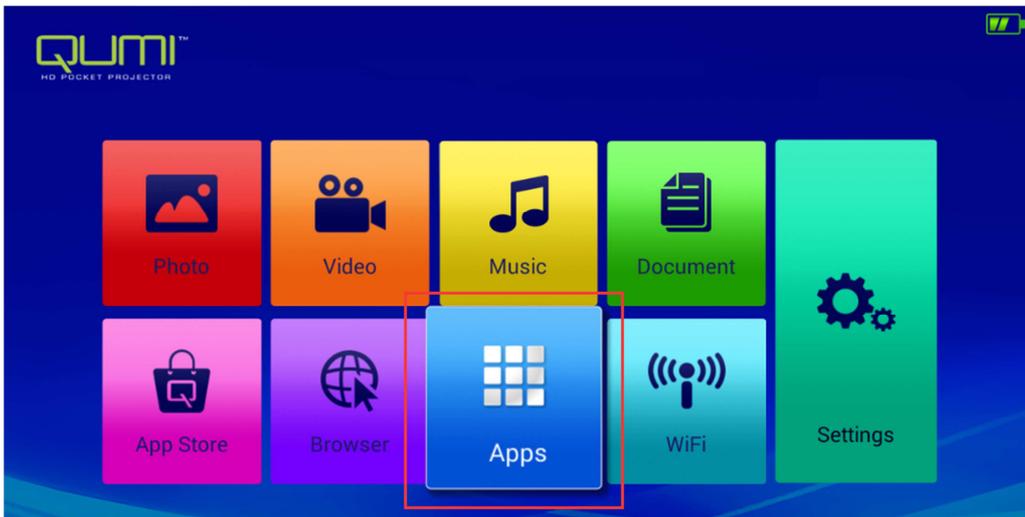

Step 3 click Filebrowser app

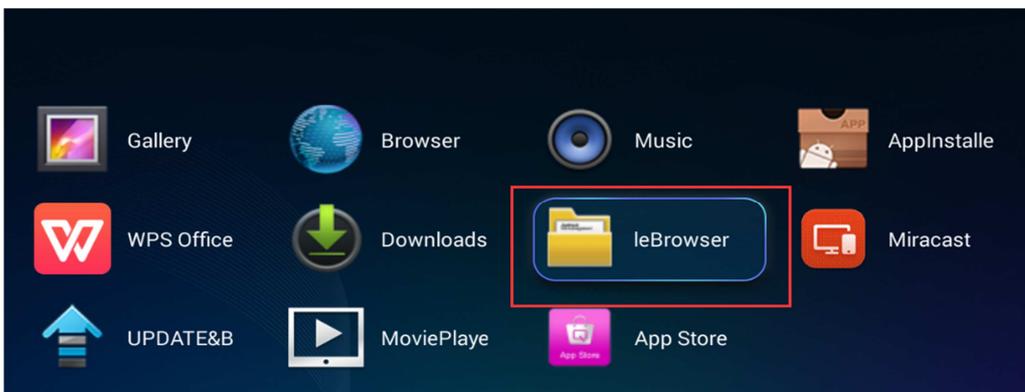

Step 4 click external disk (disk name depend on your setting)

\*\*\* please make sure the “Chick function” is not active.




Step 5 Find “Happycast\_6.1.1.5.apk” and click to setup


And it will cover current version in Q3PLUS

## Uninstall your Happycast


Step 1 in Main page, click "Setting" function

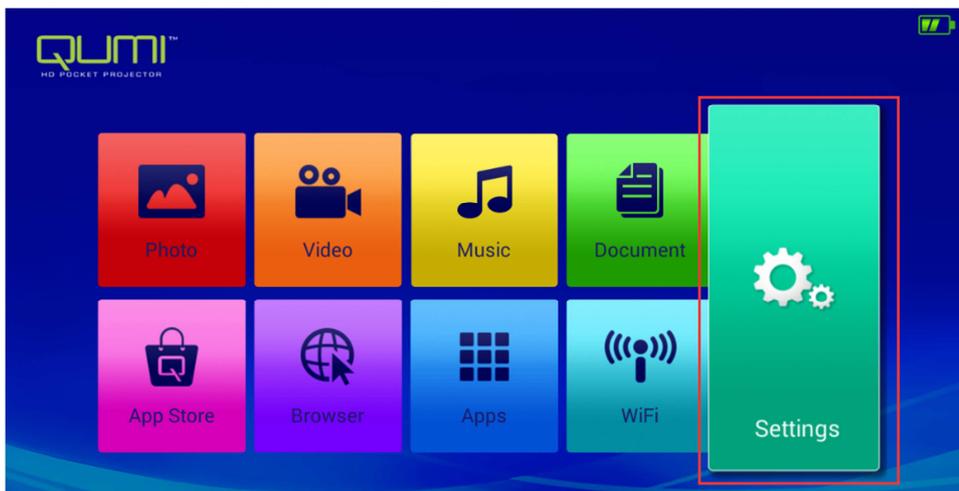


Step 2 click "Application" function

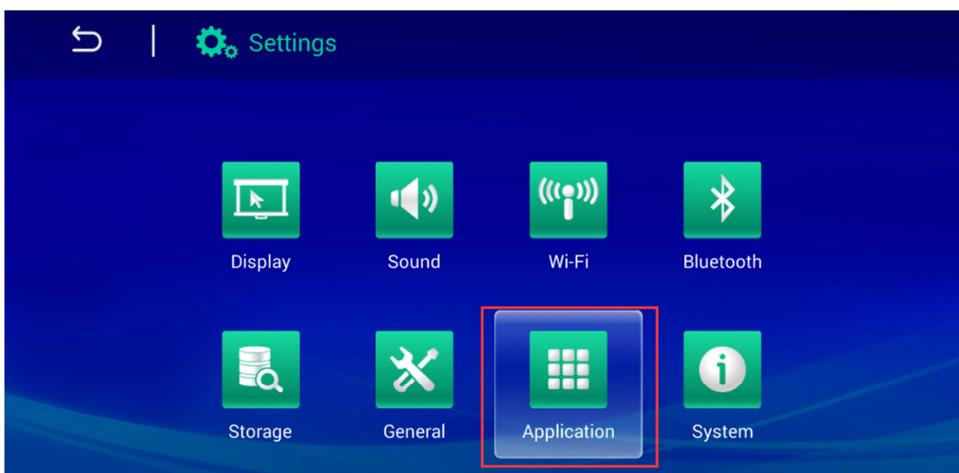

Step 3 click "Happycast" App

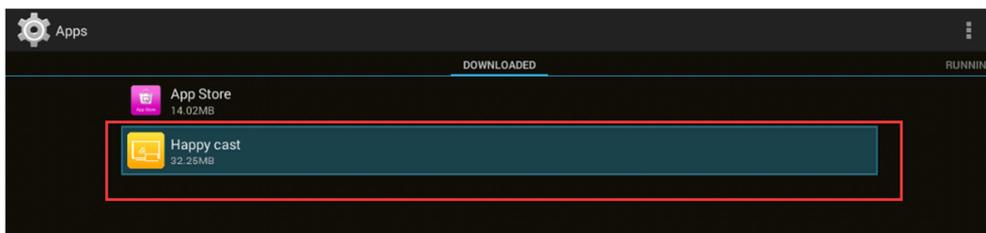

Step 4 choose "Uninstall"

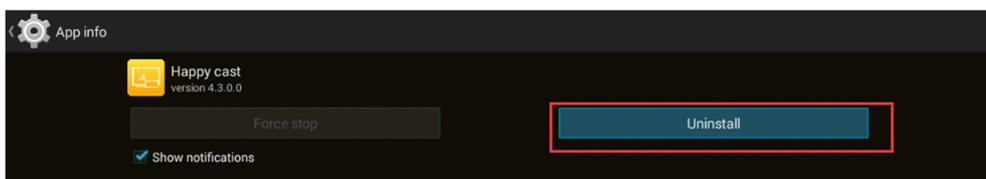

Step 5 Click "OK"

